

# Hollow Front Axle Cover Kit Assembly Instructions

REV AA

## TOOLS REQUIRED:

1/8", 3/16" ALLEN WRENCH  
THREAD LOCTITE

**NOTE: USE OF LOCTITE IS RECOMMENDED ON ALL FASTENERS.**

## INSTALLATION:

Based on vehicle model and kit, there may be variation in length and number of the screws.

STEP 1: See Figure 2 and Table 1 for model specific required parts.

STEP 2: If EXTENSION ROD (3) or (4) is not required, per Table 1, skip STEP 3.

If EXTENSION ROD is required, preassemble the CENTER ROD (2), EXTENSION SCREW (9) and either SHORT EXTENSION (4) or LONG EXTENSION (3) as required for bike model.

STEP 3: Assemble LEFT ADAPTOR (6) to CENTER ROD with LOCK WASHER (7) and SCREW (10).

STEP 4: Insert Assembly from STEP 3 through axle from left side of motorcycle until flush with left side lower shock leg.

STEP 5: While holding left side secure, assemble RIGHT ADAPTOR (5) with LOCK WASHER (7) and SCREW (10). Ensure entire assembly is secured before continuing to next step.

STEP 6: Secure each AXLE COVER (1) to LEFT/RIGHT AXLE ADPTORS (5/6) with SET SCREWS (8). Ensure Covers are flush to lower shock legs.

MODEL		EXTENSION
FXBB	Street Bob	N/A
FXLR	Softail Low	N/A
FLSL	Softail Slim	SHORT
FLDE	Softail Deluxe	SHORT
FLSB	Softail Sport Glide	SHORT
FXBR (S)	Breakout	SHORT
FLHC (S)	Heritage Classic	SHORT
FLFB (S)	Fatboy	LONG

Table 1

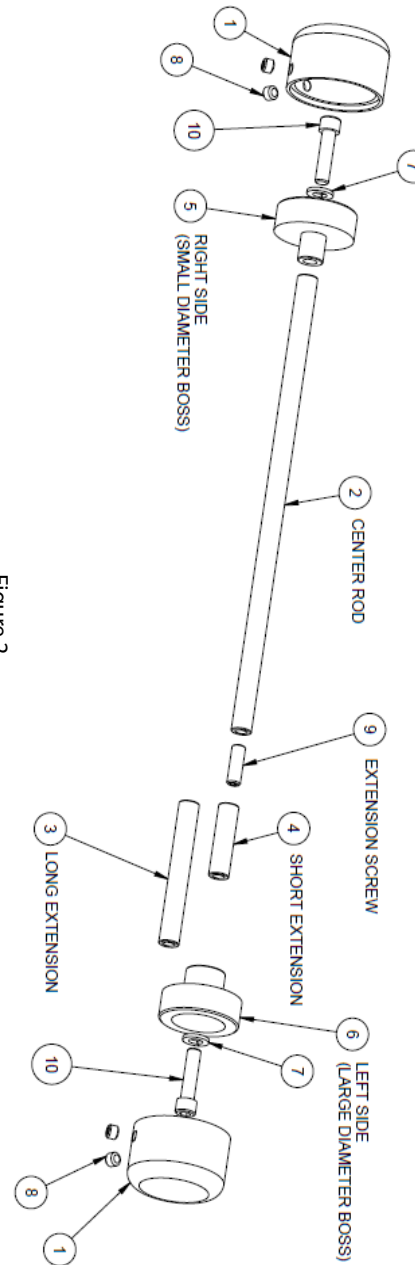


Figure 2

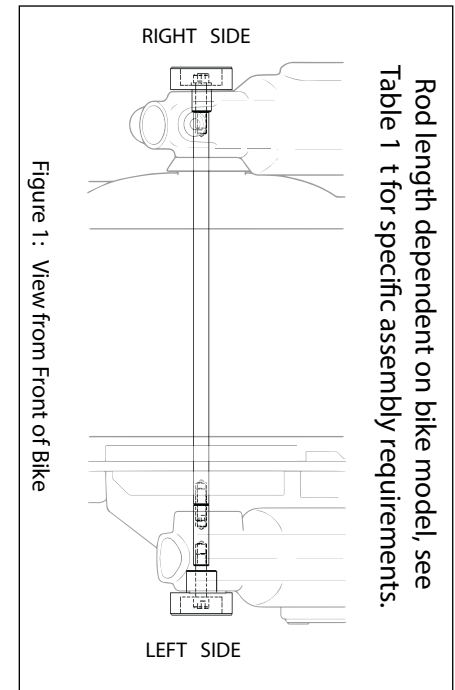


Figure 1: View from Front of Bike



# Hollow Front Axle Cover Kit Assembly Instructions

REV AA

## TOOLS REQUIRED:

1/8", 3/16" ALLEN WRENCH  
THREAD LOCTITE

**NOTE: USE OF LOCTITE IS RECOMMENDED ON ALL FASTENERS.**

## INSTALLATION:

Based on vehicle model and kit, there may be variation in length and number of the screws.

STEP 1: See Figure 2 and Table 1 for model specific required parts.

STEP 2: If EXTENSION ROD (3) or (4) is not required, per Table 1, skip STEP 3.

If EXTENSION ROD is required, preassemble the CENTER ROD (2), EXTENSION SCREW (9) and either SHORT EXTENSION (4) or LONG EXTENSION (3) as required for bike model.

STEP 3: Assemble LEFT ADAPTOR (6) to CENTER ROD with LOCK WASHER (7) and SCREW (10).

STEP 4: Insert Assembly from STEP 3 through axle from left side of motorcycle until flush with left side lower shock leg.

STEP 5: While holding left side secure, assemble RIGHT ADAPTOR (5) with LOCK WASHER (7) and SCREW (10). Ensure entire assembly is secured before continuing to next step.

STEP 6: Secure each AXLE COVER (1) to LEFT/RIGHT AXLE ADPTORS (5/6) with SET SCREWS (8). Ensure Covers are flush to lower shock legs.

MODEL		EXTENSION
FXBB	Street Bob	N/A
FXLR	Softail Low	N/A
FLSL	Softail Slim	SHORT
FLDE	Softail Deluxe	SHORT
FLSB	Softail Sport Glide	SHORT
FXBR (S)	Breakout	SHORT
FLHC (S)	Heritage Classic	SHORT
FLFB (S)	Fatboy	LONG

Table 1

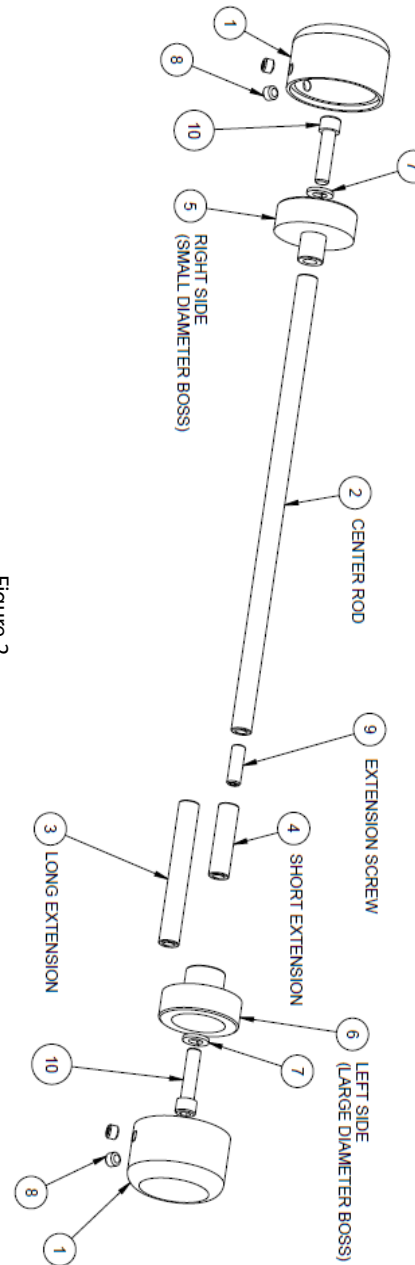


Figure 2

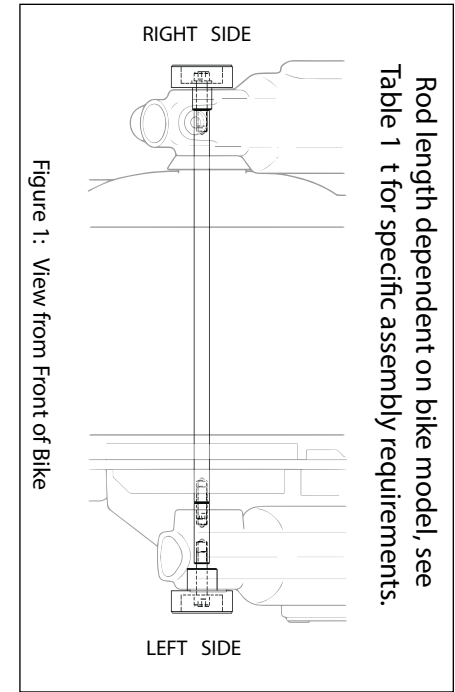


Figure 1: View from Front of Bike

